

Usage Information



Adjustable Headrest

To adjust the headrest height, simply grip it and move it up or down until it's at your preferred position.



Adjustable Lumbar

Adjust the lumbar support vertically to match the natural curve of your spine by moving it up or down as needed.



Adaptive Backrest

The adaptive backrest employs cutting-edge technology to dynamically respond to your body's movements and changes in posture, ensuring optimal support at all times.



4D Armrest Adjustment

Adjust the armrests in four directions:

- 1** vertically (up and down), **2** horizontally (side to side), **3** longitudinally (forward and backward), and **4** rotationally.



3 Position Back Tilt

Push or engage the lever to lock the backrest into one of the three available tilt positions. Adjust the tilt lock as needed to find the most comfortable position for your back and posture.

Turn the tilt tension knob clockwise to loosen the rocking tension of the chair, anti-clockwise to tighten.



Height Adjustment

Lift the lever to unlock the height adjustment. Then, while seated, raise or lower the chair to your desired height by applying pressure or releasing the lever.

Once you've reached the desired height, release the lever or deactivate the mechanism to lock the chair in place.



Seating Adjustment

Lift or activate the lever to unlock the seat pad adjustment feature. While seated, move the seat pad forward or backward to find your desired position. Once you've positioned the seat pad to your preference, release the lever or deactivate the mechanism to secure it in place.



Accessory Hook

To utilize the accessory hook feature, locate the designated hook at the back of the chair.

Simply hang your earphones or cloth on the hook for convenient storage and accessibility. This feature helps keep your workspace organized and ensures your items are within reach whenever you need them.