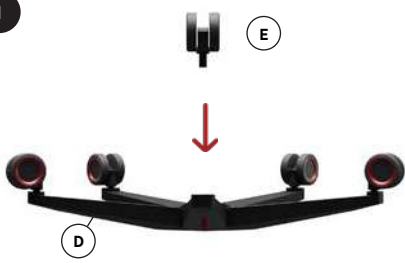

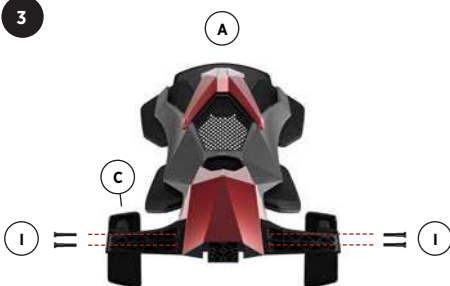





Package Contents

<p>A</p>  <p>Backrest 1 pc</p>	<p>D</p>  <p>Base 1 pc</p>	<p>G</p>  <p>Tool 1 pc</p>
<p>B</p>  <p>Seat Pad 1 pc</p>	<p>E</p>  <p>Casters 5 pcs</p>	<p>H</p>  <p>Bolts 3 pcs</p>
<p>C</p>  <p>Armrest 1 pc</p>	<p>F</p>  <p>Gas Lift Cylinder 1 pc</p>	<p>I</p>  <p>Screws 4 pcs</p>

How To Assemble

<p>1</p>  <p>Attach Casters to Base: Simply insert the stem of each caster into the holes in the base and push until they snap into place. Make sure they are securely attached.</p>	<p>2</p>  <p>Attach Gas Lift Cylinder: The gas lift cylinder is responsible for adjusting the height of the chair. Slide the gas lift cylinder into the center hole of the chair base. It should fit snugly.</p>
<p>3</p>  <p>Attach Armrests: Attach them to the seat frame using screws (provided). Make sure they are securely fastened.</p>	<p>4</p>  <p>Attach Backrest to Seat: Place the seat upside down on a flat surface. Align the mounting holes. Use screws to attach the backrest to the seat. Again, tighten the screws evenly for stability.</p>
<p>5</p>  <p>Attach Seat to Base: Align the mounting holes on the bottom of the seat with the holes on the chair base. Push until they snap into place.</p>	<p>6</p>  <p>Adjustments and Final Checks: Once all parts are attached, test the chair to ensure everything is functioning correctly.</p>



Watch Assembly Video

Scan QR Code or visit www.afterworkgears.com/content/assembly-guide to watch the full video for more detailed instructions.