
## **ASTRON** ASSEMBLY GUIDE

## **AFTERWORK**<sup>®</sup>



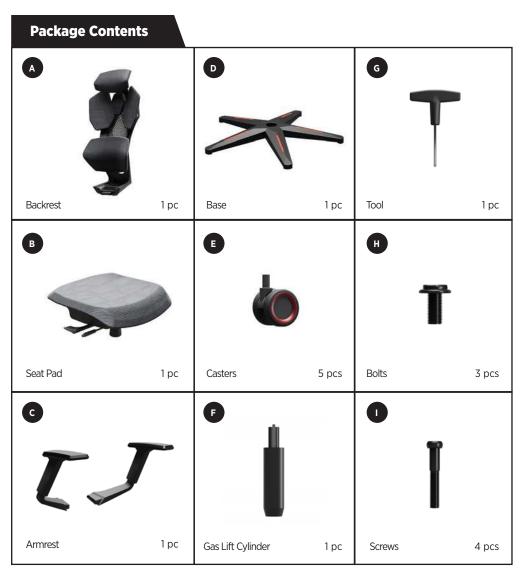


## Watch Assembly Video

Scan QR Code or visit www.afterworkgears.com/content/assembly-guide to watch the full video for more detailed instructions.




Attach Casters to Base: Simply insert the stem of each caster into the holes in the base and push until they snap into place. Make sure they are securely attached.

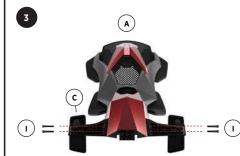

Attach Armrests: Attach them to the seat frame using screws (provided). Make sure they are securely fastened.



Attach Seat to Base: Align the mounting holes on the bottom of the seat with the holes on the chair base. Push until they snap into place.

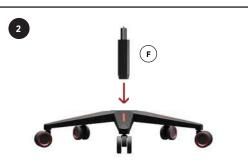

Attach Gas Lift Cylinder: The gas lift cylinder is responsible for adjusting the height of the chair. Slide the gas lift cylinder into the center hole of the chair base. It should fit snugly.



Attach Backrest to Seat: Place the seat upside down on a flat surface. Align the mounting holes. Use screws to attach the backrest to the seat. Again, tighten the screws evenly for stability.



Adjustments and Final Checks: Once all parts are attached. test the chair to ensure everything is functioning correctly.