


Package Contents

<p>A</p>  <p>Casters 5 pcs</p>	<p>F</p>  <p>Armrest 2 pcs</p>
<p>B</p>  <p>Base 1 pc</p>	<p>G</p>  <p>M6 x 30 mm Screw #1 6 pcs</p>
<p>C</p>  <p>Gas Lift Cylinder 1 pc</p>	<p>G1</p>  <p>M8 x 20 mm Bolts 4 pcs</p>
<p>D</p>  <p>Seat pad with footrest 1 pc</p>	<p>G2</p>  <p>M6 x 20 mm Screw #2 2 pcs</p>
<p>E</p>  <p>Backrest 1 pc</p>	<p>H</p>  <p>Armrest 2 pcs</p>
	<p>I</p>  <p>Tool 1 pc</p>

How To Assemble

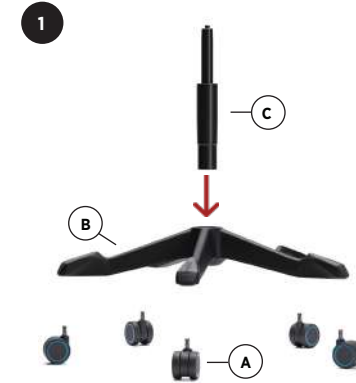


Install Casters and Gas Lift Cylinder

Insert the stem of each caster into the holes in the base and push until they snap into place. Ensure they are securely attached. Then, slide the gas lift cylinder into the center hole of the chair base so that it fits snugly.



Attach the Headrest

Attach the headrest to the backrest and secure it with Screw #2

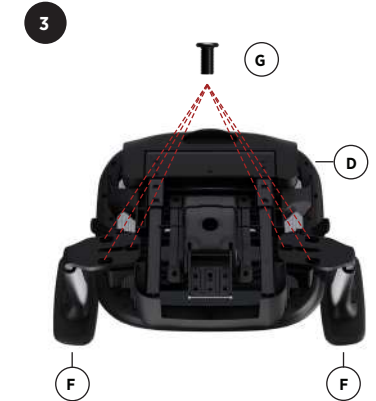

Secure the Armrests

Secure the armrests to the seat pad using Screw #1



Connect Backrest and Seat Pad

Attach the backrest and seat pad together, securing them with the bolts.



Attach the Base to the Seat

Attach the base with the attached gas lift by aligning the mounting holes on the bottom of the seat with the holes on the chair base. Push until they snap into place.



Final Check

Once all parts are attached, test the chair to ensure everything is functioning correctly.



Watch Assembly Video

Scan QR Code or visit www.afterworkgears.com/content/assembly-guide to watch the full video for more detailed instructions.